

Trouble Code Diagnostic ABS TOYOTA*

ABS (Tmc/Denso Made)	ABS (Tmmk/Bosch Made)	ABS with Traction Control
11 ABS Solenoid Relay Circuit	11 ABS & Trac Solenoid Relay Circuit	11 ABS Solenoid Valve Relay Circuit
12 ABS Solenoid Relay Circuit	12 ABS & Trac Solenoid Relay Circuit	13 Pump Motor Circuit
13 ABS Motor Relay Circuit	13 ABS & Trac Motor Relay Circuit	21 ABS Solenoid Valve Circuit
14 ABS Motor Relay Circuit	14 ABS & Trac Motor Relay Circuit	22 ABS Solenoid Valve Circuit
21 ABS Actuator Solenoid Circuit	21 ABS & Trac Solenoid Circuit	23 ABS Solenoid Valve Circuit
22 ABS Actuator Solenoid Circuit	22 ABS & Trac Solenoid Circuit	24 ABS Solenoid Valve Circuit
23 ABS Actuator Solenoid Circuit	23 ABS & Trac Solenoid Circuit	31 Right Front Speed Sensor Circuit
24 ABS Actuator Solenoid Circuit	24 ABS & Trac Solenoid Circuit	32 Left Front Speed Sensor Circuit
31 Speed Sensor Circuit	25 ABS & Trac Solenoid Circuit	33 Right Rear Speed Sensor
32 Speed Sensor Circuit	26 ABS & Trac Solenoid Circuit	34 Left Rear Speed Sensor
33 Speed Sensor Circuit	27 ABS & Trac Solenoid Circuit	35 Right Front Speed Sensor
34 Speed Sensor Circuit	28 ABS & Trac Solenoid Circuit	36 Left Front Speed Sensor
41 IG Power Source Circuit	31 Speed Sensor Circuit	37 Speed Sensor Rotor Faulty
49 Stop Light Switch Circuit	32 Speed Sensor Circuit	38 Right Rear Speed Sensor
51 ABS Pump Motor Lock	33 Speed Sensor Circuit	39 Left Rear Speed Sensor
	34 Speed Sensor Circuit	41 Power Source Circuit
	41 IG Power Source Circuit	58 Stop Light Switch Circuit
	43 ABS Control System Malfunction	62 ABS ECU Malfunction
	44 ABS Signal Circuit	
	49 Stop Light Switch Circuit	
	51 ABS Pump Motor Lock	
	53 ECM Communication Circuit Malfunction	
	61 Engine Control System Malfunction	

Copyright © 2001 ALLDATA LLC

* Описание методики считывания кодов самодиагностики ABS смотрите на

al tech page
 (<http://www.alflash.narod.ru/>)