


■ AIR OUTLETS AND AIRFLOW VOLUME

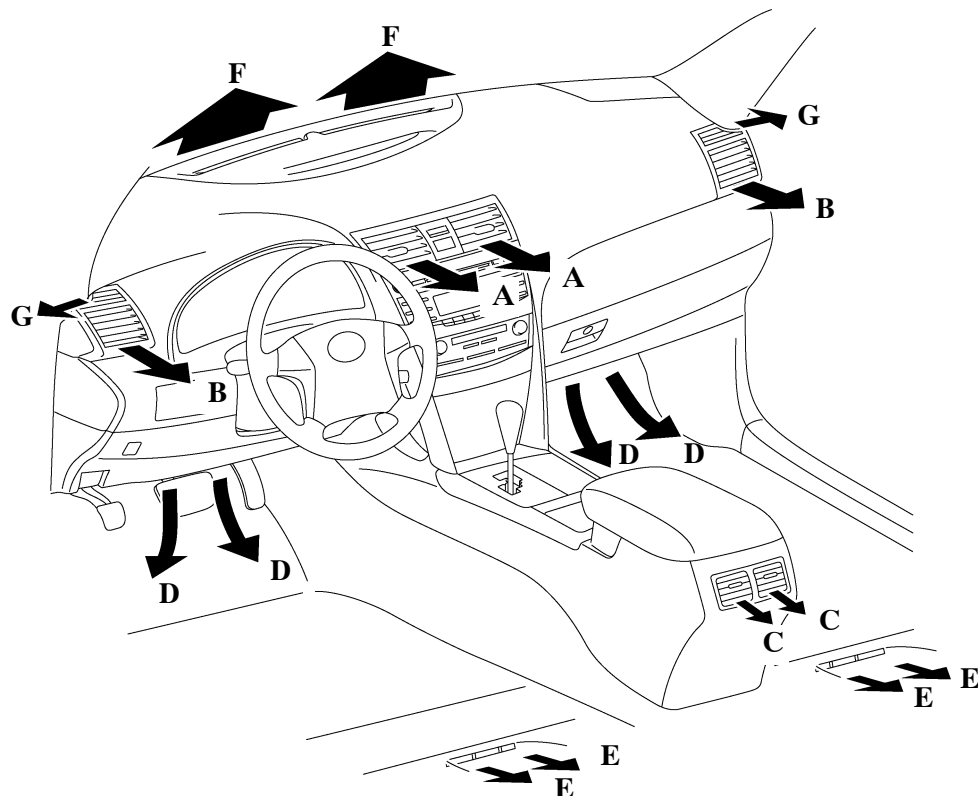

025BE43TE

INDICATION	MODE	SELECTION		FACE			FOOT		DEF	
				CTR	SIDE	RR	FR	RR	CTR	SIDE
		AUTO	MANUAL	A	B	C*6	D	E	F	G
 187BE24	FACE	○	○	○	○	○	—	—	—	—
 187BE25	B/L-U*1	○	○	○	○	○	○	○	—	—
	B/L-L*2	○	—	○	○	○	○	○	—	—
 187BE26	FOOT-F*3	○	○	—	○	○	○	○	○	○
	FOOT-R*4	○	—	—	○	○	○	○	○	○
	FOOT-D*5	○	—	—	○	○	○	○	○	○
 187BE27	F/D	○	○	—	○	○	○	○	○	○
 187BE28	DEF	○	○	—	○	—	—	—	○	○

The size of the circle ○ indicates the proportion of airflow volume.

*1: Greater airflow volume at the upper area.

*2: Greater airflow volume at the lower area.

*3: Greater airflow volume at the front.

*4: Greater airflow volume at the rear.

*5: Greater airflow volume at the defroster.

*6: Only for models with automatic air conditioning.