


■ AIR OUTLETS AND AIRFLOW VOLUME

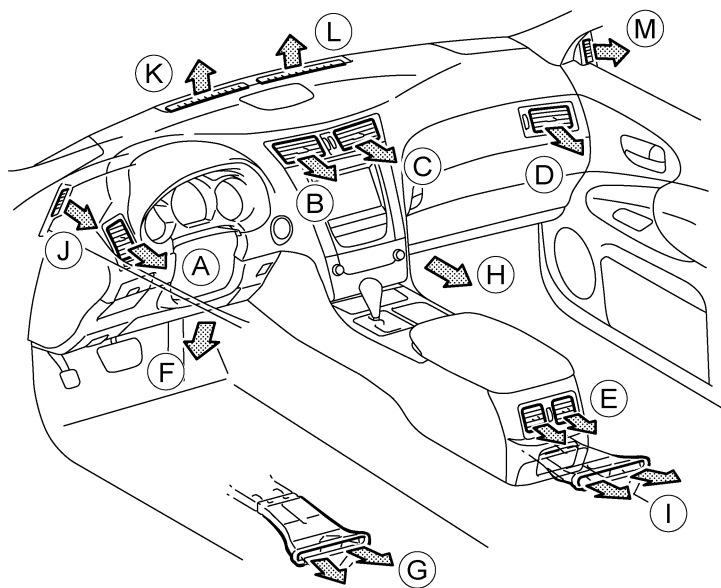

02EBE104Y

Indication	Mode	Selection		Face					Footwell				Defroster			
		AUTO	MANUAL	Driver		Front Passenger		Rear	LH		RH		Driver		Front Passenger	
				A	B	C	D		F	G	H	I	K	J	L	M
 187BE24	FACE-U*1	○	○	○	○	○	○	○	—	—	—	—	—	—	—	—
	FACE-L*2	○	—	○	○	○	○	○	○	○	○	○	—	—	—	—
 187BE25	BI-LEVEL U*1	○	○	○	○	○	○	○	○	○	○	○	—	—	—	—
	BI-LEVEL L*2	○	—	○	○	○	○	○	○	○	○	○	—	—	—	—
 187BE26	FOOT (DEF=0)	—	○	○	○	○	○	○	○	○	○	○	—	—	—	—
	FOOT D*3	○	—	○	○	○	○	○	○	○	○	○	○	○	○	○
	FOOT R*4	○	—	○	○	○	○	○	○	○	○	○	○	○	○	○
	FOOT F*5	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
 187BE27	FOOT/DEF	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
 187BE28	DEF	○	○	—	—	—	—	—	—	—	—	—	○	○	○	○

The size of the circle ○ indicates the proportion of airflow volume.

*1: Greater airflow volume at the upper area.

*2: Greater airflow volume at the lower area.

*3: Greater airflow volume at the defroster.

*4: Greater airflow volume at the rear.

*5: Greater airflow volume at the front.